Here's what's in your kit:



Power cord



(optional for install)



Panoramic Wifi Gateway

Here's what you'll need:



Smartphone, tablet, or computer

Here's what to do:



1 Plug in the Gateway

Connect the **coax cable** (1) to the Gateway and to an active cable outlet.

Then connect the **power cord** (2) to the Gateway and to an electrical outlet. Make sure the electrical outlet isn't connected to a dimmer.

TIP: Plug the coax cable into a centrally located cable outlet or use the same outlet where the old device was connected.

2 Connect to the network

Wait about **10 minutes** for the Gateway to power on. Then open the **wifi settings** on your smartphone, tablet, or computer.

Connect to the network using the **network name (SSID)** and the **password** from the label on the bottom of the Gateway.

Once it's connected to the network, open a browser and surf the web to verify that your internet is good to go.

TIP: If you're having trouble connecting, then just wait a few minutes and try again.

3 Personalize your wifi experience

We recommend you download the **Cox Panoramic Wifi app**. It will help you personalize your network and optimize your wifi experience.

COX。

Getting

started

is easy.

Instructions Panoramic Wifi Gateway

We're here to help.



- Place the Gateway at least 3 feet above ground and avoid cramped spaces in order to get the **strongest wifi signal.**
- If you have Cox phone service and want to use the Gateway for it, insert your phone cord into the top left phone port J on the Gateway.
- For **Cox Homelife customers**, after your Gateway is installed, please reboot your router by removing the power cord and plugging it back in.



Why isn't my Gateway working?

Try rebooting it—just unplug the power cord from the wall, wait about 10 seconds, then plug it back in. It may take a few minutes to reset. Also, make sure all of the connections are tight and completely plugged in.

Which coax outlet should I use?

It needs to be an active outlet. It should be centrally located and not surrounded by metal objects. It's common to have inactive outlets so try a different one if it's not working.

What's the Ethernet cable for?

It's an optional cable to connect your computer to the Gateway via a wire, rather than wirelessly.

- APP: Cox app has 24/7 support & help videos
- WEB: Cox.com/installhelp, Cox.com/wifisupport
- \odot CHAT: Live chat on Cox.com/chat or text 54512
- € CALL: 1-888-556-1193
- (ℜ) ACCESSIBILITY: Cox.com/accessibility



Help us send zero waste to landfills by recycling the kit once you're finished. It's made with 100% recyclable materials.



Tu kit incluye:



Cable coaxial



Cable de corriente



Cable de Ethernet (opcional para la instalación)



Panoramic Wifi Gateway

Lo que necesitas:



Smartphone, tablet o computadora

Lo que debes hacer:



1 Conecta el Gateway

Conecta el **cable coaxial** (1) al *Gateway* y a una toma de cable activa.

Conecta el **cable de corriente** (2) al *Gateway* y a una toma de corriente. Asegúrate de que la toma de corriente no esté conectada a un atenuador.

CONSEJO: Conecta el cable coaxial a una toma de cable en una ubicación céntrica o utiliza la misma toma de corriente donde estaba conectado el equipo antiguo.

2 Conéctate a la red

Espera unos **10 minutos** para que el *Gateway* se encienda. Luego abre la **configuración de wifi** en tu *smartphone, tablet* o computadora.

Conéctate a la red utilizando el **nombre de red (SSID)** y la **contraseña** que están en la etiqueta en la parte inferior del *Gateway*.

Una vez que estés conectado a la red, abre un navegador y navega por la web para verificar que tu internet está funcionando.

CONSEJO: Si tienes problemas para conectarte, espera unos minutos e inténtalo de nuevo.

3 Personaliza tu experiencia de wifi

Te recomendamos que descargues la **app de Cox Panoramic Wifi**. Te ayudará a personalizar tu red y optimizar tu experiencia de wifi.

COX_®

Comenzar

es fácil.

Instrucciones Panoramic Wifi Gateway

Estamos aquí para ayudarte.



- Coloca el *Gateway* al menos 3 pies sobre el suelo y evita espacios angostos para obtener la **señal de wifi más fuerte.**
- Si tienes el servicio telefónico de Cox y quieres usar el Gateway para usarlo, inserta el cable de tu teléfono en el puerto para teléfono en la parte izquierda superior J del Gateway.
- Para **clientes de Cox Homelife**, después de instalar el *Gateway*, reinicia el *router* desconectando el cable de corriente y conectándolo de nuevo.

? Preguntas frecuentes

¿Por qué no funciona mi Gateway?

Intenta reiniciarlo—simplemente desconecta el cable de corriente del *Gateway*, espera unos 10 segundos y luego vuelve a conectarlo. Asegúrate de que todas las conexiones estén ajustadas y completamente conectadas.

¿Qué salida coaxial debo usar?

Tiene que ser una salida activa. Debe estar en una ubicación céntrica y no estar rodeada de objetos metálicos. Es común tener salidas inactivas, así que prueba una diferente si no funciona.

¿Para qué sirve el cable de Ethernet?

Es un cable opcional para conectar la computadora al *Gateway* a través de un cable, en lugar de forma inalámbrica.

- APP: La app de Cox incluye soporte técnico 24/7 y videos de ayuda
- WEB: Cox.com/installhelp, Cox.com/wifisupport
- CHAT: chatea en vivo en Cox.com/chat o envía un texto al 54512
- & LLAMA: 1-888-556-1193
- (*) ACCESIBILIDAD: Cox.com/accessibility



Ayúdanos a enviar cero desechos a los basureros reciclando el kit cuando hayas terminado. Está hecho con materiales 100% reciclables.