



1

Leave this end of COAX CABLE connected to wall.

- A** Turn off TV. Disconnect CABLE from TV
- B** Reconnect CABLE to MINI BOX

2

For HDTV
Connect HDMI CABLE to HDMI PORT on TV

FOR OLDER TVs (non-HDTVs), use the cable in the blue bag and refer to page 8 in the Easy Setup Guide

3

IMPORTANT
CONNECT POWER LAST
Connect POWER CORD to wall OUTLET

4

Turn on TV
Select HDMI by pressing "Input" or "Source" button on TV or TV remote until you see a picture

FOR OLDER TVs (non-HDTVs), tune TV to channel 3 or 4

The mini box will automatically load
This may take 10 minutes